

## THM-0200 New Features

### Changeover

This feature allows the user to choose either an automatic or a manual switch over between heating cycles and cooling cycles. This option is only available when you select "YES" in View Auto options in the Special Functions menu.

### Auto:

Allows the user to change automatically from "HEAT" mode to "COOL" mode or viceversa.

### Heat:

Allows the user to be in "HEAT" mode only.

### Cool:

Allows the user to be in "COOL" mode only.

### View Auto:

This feature allows the user to see or not see the change over option in the "ADJUSTMENT" screen. This option is available in the "SPECIAL FUNCTIONS" screen.

### Yes:

The changeover option is going to appear in the "ADJUSTMENT" screen.

### No:

The changeover option is not going to appear in the "ADJUSTMENT" screen.

### Intermittent Fan OFF/ON:

This feature allows the user to have the option to run the fan intermittently for a certain period of time. This option is not applicable to 2 Heat/Cool, 2Cool/Heat or Boiler Mode.

### ON:


Enables the fan to run continuously, regardless of whether the thermostat is calling for heat or cooling.

### OFF:

Does not enable the fan to run continuously, regardless of whether the thermostat is calling for heat or cooling.

### INT ON/OFF:

This setting will set the ON/OFF time for the intermittent fan  
Ex. The fan will come on for 15 min every 2h.

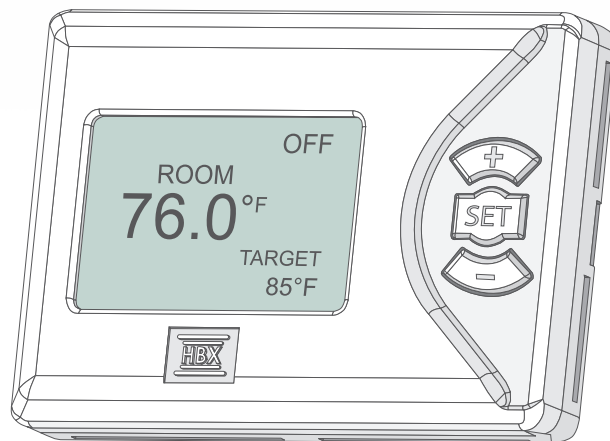

#### Contact

4516 - 112<sup>th</sup> Avenue SE  
Calgary, Alberta T2C 2K2  
CANADA

Phone: +1(403)720-0029

Fax: +1(403)720-0054

Email: [info@hbxccontrols.com](mailto:info@hbxccontrols.com)